

**EdenPURE®**



## **360 Air Fan GEN55**

**Model: A6066**

**IMPORTANT:  
SAVE THESE  
INSTRUCTIONS**

---

**To ensure you get the best results from your Fan, please read this manual first and keep it for future reference. For additional information, please call 1-800-225-6595.**

---

**Thank you for choosing EdenPURE®**

# IMPORTANT INSTRUCTIONS

## WARNING

IMPROPER USE OF THIS FAN COULD RESULT IN RISK OF FIRE, ELECTRIC SHOCK,  
AND INJURY TO PERSONS

---

## WARNING

WHEN OUT OF WARRANTY ALL REPAIRS SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.  
PARTS ARE AVAILABLE ON [WWW.EDENPURE.COM](http://WWW.EDENPURE.COM).

PLEASE CONTACT OUR SUPPORT CENTER FOR ANY PRODUCT REQUIRING REPAIR  
DURING THE ONE YEAR WARRANTY PERIOD. CALL 1-800-225-6595 OR VISIT  
[WWW.EDENPURESUPPORT.COM](http://WWW.EDENPURESUPPORT.COM)

---



**WARNING**  
RISK OF ELECTRICAL SHOCK DO NOT OPEN  
NO USER-SERVICEABLE PARTS INSIDE



## READ AND SAVE THESE INSTRUCTIONS BEFORE USING THIS FAN

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Always operate the fan from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Remove the unit from its packaging and check to make sure it is in good condition before using.
- Do not let children play with parts of the packaging (such as plastic bags).
- Close supervision is necessary when the product is used by or near children or persons with reduced physical, sensory or mental capabilities. Do not allow children to use it as a toy.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Contact our Support Center for repair or replacement.
- Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electrical shock.
- Never install the unit where it is exposed to direct sunlight, excessive moisture/rain, dust and lack of ventilation near any heat sources.
- Avoid making contact with moving parts. Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, especially while the unit is working.
- Always place the fan on a stable, level surface when operating to prevent the

fan from overturning. Do not run the power cord under carpet. Do not cover the power cord with throw rugs or runners. Route the power cord away from walking paths so that nobody can trip over it. The cable should be kept away from heat, sharp edges and oil.

- To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
- This product should not be used in the immediate vicinity of water, such as bathtub, sink, swimming pool etc., where the likelihood of immersion or splashing could occur.
- Switch off and unplug from outlet when not in use, and before cleaning. Remove by grasping the plug - do not pull on the cord.
- Be sure that no other high current appliances are plugged into the same circuit as your fan, as an overload can occur.
- Avoid the use of an extension cord as the extension cord may overheat and cause a risk of fire.
- Do not use the appliance for other than its intended use.
- Do not use outdoors. FOR INDOOR USE ONLY.
- Do not leave the appliance unattended when switched on.
- Do not cover the grill, or operate in close proximity to curtains etc.
- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- This product is intended for normal domestic/household use only.
- Never leave a working appliance unattended, even for a short period of time – always switch it off. Please unplug the appliance from the power supply when not in use.
- Use this fan as described in this manual. Any other uses not recommended by the manufacturer may cause fire, electric shock, or injury to persons and may void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the fan running unattended.
- **WARNING:** If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This product has not been designed for any uses other than those specified in this booklet.


- **CAUTION:** Never insert your fingers or any other objects (hair, clothes, utensils, knives, screw drivers etc.) into the openings of the guard or close to the blade when the appliance is connected to the power supply.
- **CAUTION:** DO NOT COVER the appliance in any way in order to avoid overheating and fire.
- **CAUTION - RISK OF ELECTRIC SHOCK:** To reduce the risk of electric shock do not open this device: there are no serviceable parts for customers. Please contact our Support Center.

## BEFORE FIRST USE

Before use, remove all packaging materials and inspect the appliance for any damage. If there appears to be any damage, please contact our Support Center at 1-800-225-6595.

## PARTS & FEATURES



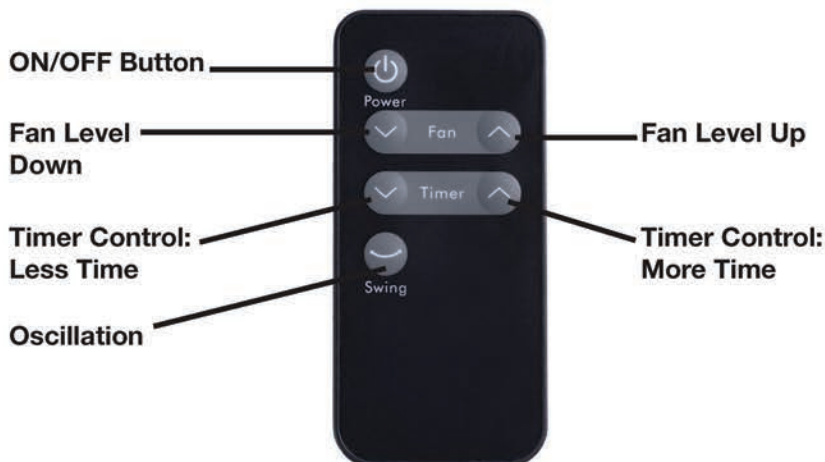

## OPERATING INSTRUCTIONS

**NOTE:** Before inserting the plug into a power outlet, make sure that the correct voltage being used, corresponding to what is indicated on the rating label.

**CAUTION:** Select a suitable location for the fan. Always choose a safe location in accordance to the safely recommendations outlined.

1. Unpack the fan gently.
2. Remove the protective foam and plastic bag and save it for future use.
3. Place the fan on a dry, firm and level surface.
4. Plug the DC Plug of the adaptor to the DC connector that is located at the fan's base.
5. Press the power button to turn the unit "ON".
6. Set the desired speed through the fan control button from 1-12 levels.
7. Set the desired time (hours) that you expect the fan to run from 1-9 hours.
8. To turn the unit OFF, press the power button.

**CAUTION:** The fan should always be switched off when making any adjustments to the fan head angle, or before moving the unit to a different location.

Adjust the fan to the desired angular air output direction.

## CARE & CLEANING

**NOTE:** If the power cord set of this appliance becomes damaged, discontinue use. Repairs should be undertaken only by a qualified technician. Contact our Support Center.

## CAUTION:

- To avoid of electric shock, you must always turn the fan off and unplug it before cleaning.
- Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the plastic components and the paint finish.
- Your appliance must be switched OFF via the main power supply and unplugged, and allowed it to cool down before proceeding with any cleaning.
- Clean the housing with a damp cloth, a vacuum cleaner or a dusting brush.
- We recommended lightly running a vacuum cleaner brush nozzle over the fan grille to remove any dust or dirt that may have accumulated.
- DO NOT use the fan in oily or dirty areas (i.e. the kitchen, smoky places, etc), as air vents may become blocked.
- DO NOT use gasoline, paint thinner, solvents or abrasive cleaners on this appliance.
- DO NOT immerse the fan in water or liquid and never allow water to drip into the motor housing.
- To clean the air inlets you can use a vacuum cleaner with a corresponding attachment.

For storage, clean the fan carefully as instructed. Store the fan in the original packaging or cover the fan to protect it from dust.

**NOTE:** If the power cord set of this appliance becomes damaged, discontinue use.

Repairs should be undertaken only by a qualified technician. Contact our Support Center.

## DISPOSAL

### Environmental Protection



Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

## SPECIFICATIONS

Model: A6066

Power Output: 24 V DC | 1500 mA

Power Input: 100 – 240VAC | 50/60Hz | 1.0A

Power Usage: 2-24W

## CUSTOMER SERVICE/SUPPORT

For repairs or service, please contact our Customer Service/Support team at 1-800-225-6595 or visit [www.edenpuresupport.com](http://www.edenpuresupport.com).

---

### **WARNING**

**ANY REQUIRED SERVICE OTHER THAN ROUTINE CLEANING SHOULD ONLY BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE**

---

## **WARRANTY**

The 360 Air Fan GEN55 comes with a ONE-YEAR LIMITED COMPONENT WARRANTY. If your unit does not appear to be working properly, please contact our service center by calling 1-800-225-6595. Prior to your call, we encourage you to visit our service related website [www.edenpuresupport.com](http://www.edenpuresupport.com) for troubleshooting tips and service instructions if needed.

EdenPURE®  
7584 Whipple Ave. NW  
N. Canton, OH 44720

To place an order, call 1-800-360-1070 or visit [www.edenpure.com](http://www.edenpure.com).