
Bio SpeedCLEAN™ XL200

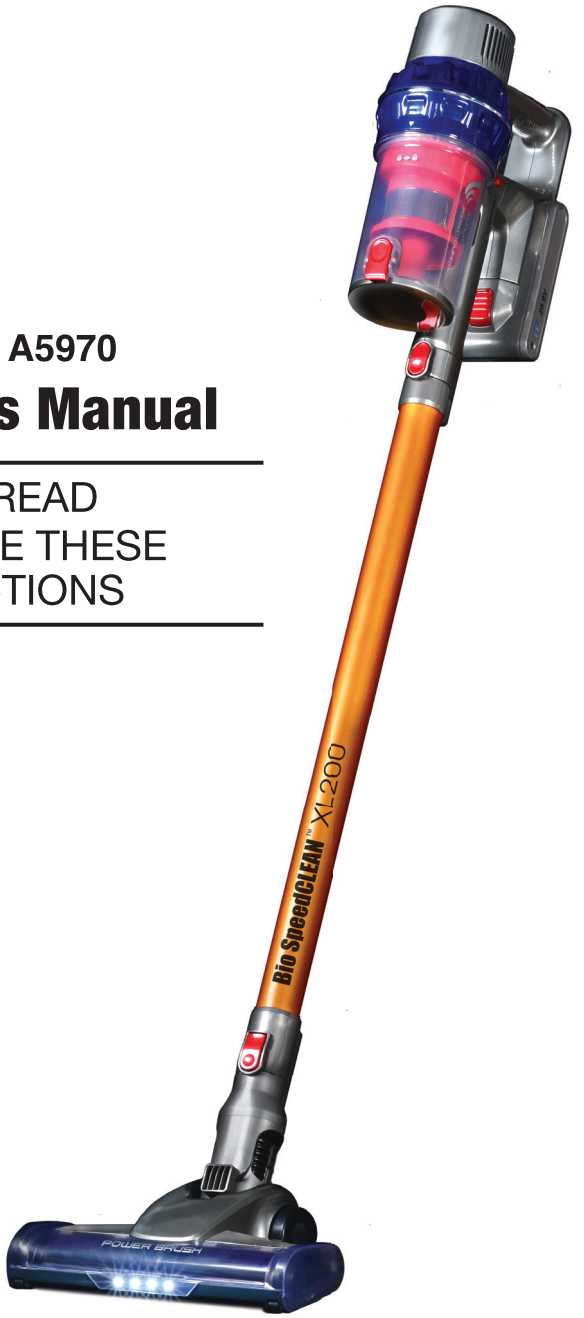

Model No. A5970

Owner's Manual

PLEASE READ
AND SAVE THESE
INSTRUCTIONS

INSTRUCTIONS

PLEASE CAREFULLY READ THIS MANUAL BEFORE OPERATING THIS MACHINE

Do not use this vacuum to clean up liquids such as water, detergent or other wet fluids.

Do not use this vacuum to clean up small granules such as flour, cement or plaster powder or large objects such as toys or balls of paper. That will cause the vacuum to become blocked and overheat.

Use a damp cloth with mild detergent to clean the outside of this machine. Make sure it is unplugged from the wall outlet before cleaning it.

Do not store this vacuum in very high or low temperatures. Do not let it sit in the sun. Store it in a cool, dry spot.


Charge the batteries fully before using it the first time. If this unit is stored a long time, you may need to recharge the batteries before using it again.


When the usage time is becoming shorter as the batteries weaken, it may be necessary to replace the battery pack.

Charge the battery pack only with the adaptor that is provided with this machine. Do not disassemble the battery pack or get it close to liquids. Do not place the battery pack near high temperatures. Do not disassemble the battery pack.

If this vacuum is not working properly, contact custserv@edenpure.com. Do not try to repair the unit yourself.

Do not let children play with or use this machine or the battery pack.

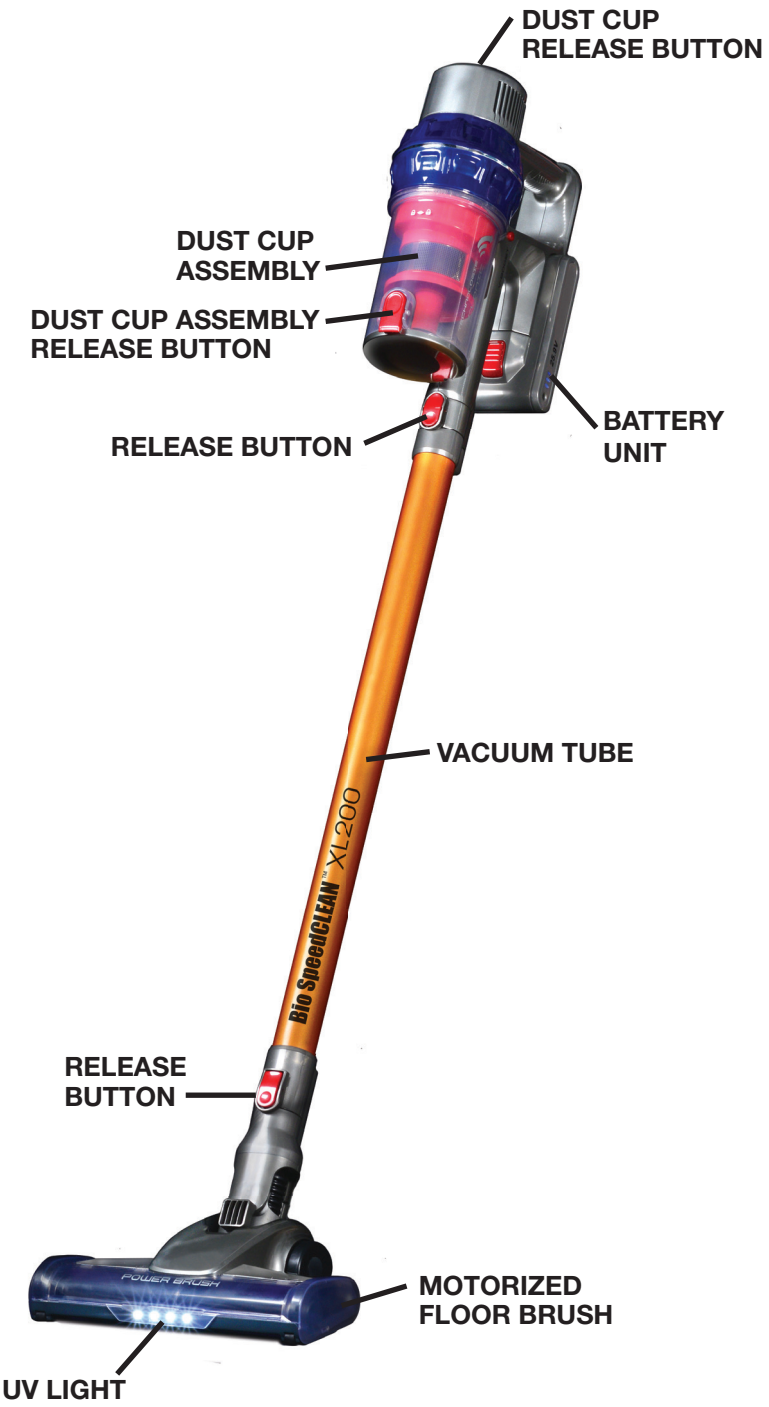
DUST CUP
RELEASE BUTTON
DUST CUP
ASSEMBLY
DUST CUP ASSEMBLY
RELEASE BUTTON
RELEASE BUTTON
BATTERY
UNIT
VACUUM TUBE
Bio SpeedCLEAN™ XL200
RELEASE
BUTTON
POWER BRUSH
MOTORIZED
FLOOR BRUSH
UV LIGHT

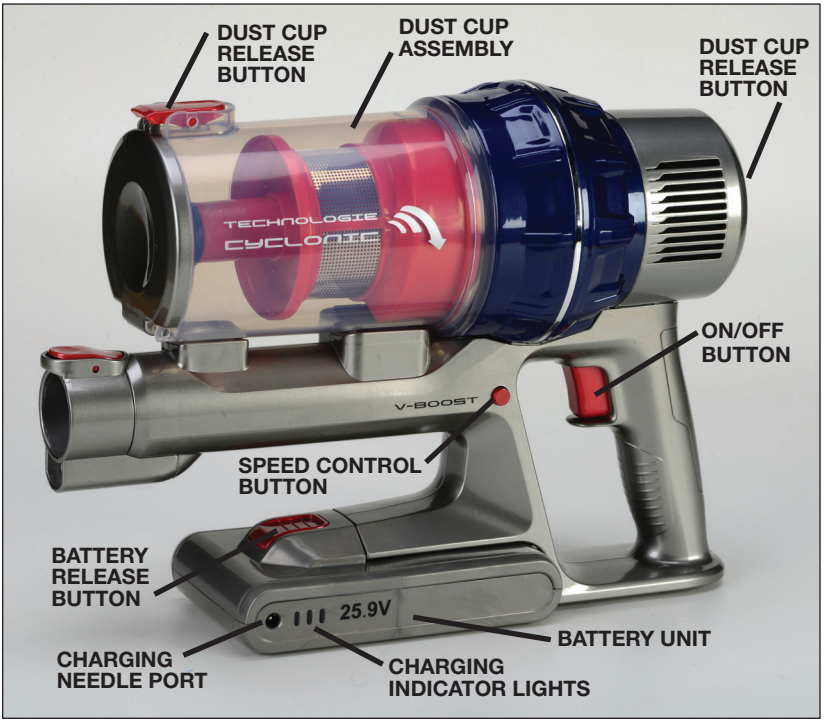



CHARGING CORD



2-IN-1 UPHOLSTERY BRUSH



PET BRUSH



LONG CREVICE TOOL

PARTS ASSEMBLY

◆ Battery Unit

Insert the battery unit into the bottom of the motor. When it is locked into the motor, you will hear it click.



◆ Dust Cup

Insert the lower plastic clip into the hole on the motor. Then snap the upper cover with the upper release button on the motor. Snap the Dust Cup in place, then press down on the upper and lower release button to lock the cup into place.



◆ Connection of the Motor and the Vacuum Tube

Insert the upper end of the Vacuum Tube in to the main hole of the Motor below the Dust Cup until you hear it click in and lock into place.




◆ Connection of accessory pieces to the Motor

Insert the accessory brushes into the main hole of the motor below the Dust Cup until you hear them click in and lock into place.



◆ Connection of the Vacuum Tube with the accessory pieces

Insert the accessory brushes into the bottom of the Vacuum Tube until you hear them click and lock into place.

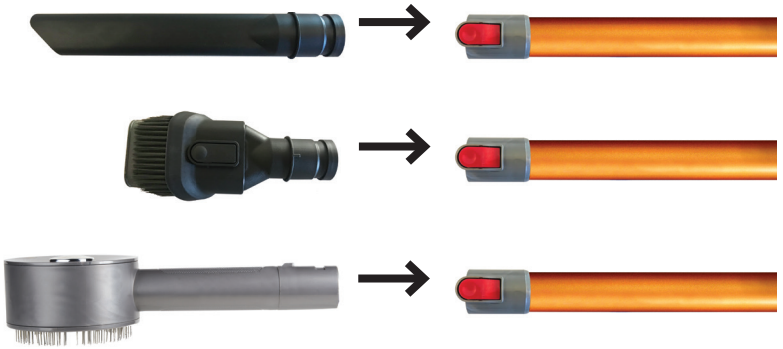

WALL MOUNT

Attach wall mount to a wall using the screws and anchors that are included. Flip the wall mount handle on the main vacuum unit down to allow the unit to hang onto the wall mount.



USES

◆ Low Speed, High Speed, Off

Press the Speed Control Button once to turn the unit on. Press it again to turn the unit off. Use the Speed Control Button on the side of the unit to switch the speed between low and high.

◆ Use of 2-in-1 Upholstery Brush

1. Insert the 2-in-1 Upholstery Brush into the hole below the Dust Cup Assembly, then push out the brush head of the 2-in-1 Upholstery Brush by pressing the button and pushing the brush out at the same time. You can then clean furniture, home appliances, book shelves, wardrobes, vanity tables, PC keyboards and many other places.
2. Pull the brush head back by pressing the button and pushing the brush back in at the same time. You can then clean beds, curtains, sofas and many other places.

◆ Use of Motorized Floor Brush

Insert the Motorized Floor Brush into the end of the lower Vacuum Tube or into hole below the Dust Assembly. You can then clean carpet, tile and other flooring.

◆ Pet Brush

Insert the Pet Brush into the end of the lower Vacuum Tube or into the hole below the Dust Assembly. Brush your pet's fur with the exposed brush. When the brush is full, turn the vacuum off and let go of the brush release to clean the fur off.

◆ Charging the Unit

Use the included adaptor to charge the battery. Plug the adaptor into the Charging Port on the Motor and plug the other end into a wall outlet. When it is charging, the lights will turn blue one by one as it charges up. When all 3 blue lights are on, it is fully charged and you can remove the adaptor.

You can also charge the battery when it is outside the unit by plugging the adaptor into the Charging Port on the battery and plugging the other end into the wall.

CLEANING THE UNIT



◆ Clean Dust Cup after each use

Press the upper button on the Motor to release the Dust Cup Assembly Unit, then press the lower button to release the Dust Cup Lower Cover.

◆ Dust Cup Filter Cleaning

A. Press the button at the bottom of the Dust Cup to release the Lower Cover of the Dust Cup to empty it into the trash.

B. Hold the Dust Cup with one hand, and use your other hand to open the top of the Dust Cup counter-clockwise and take the upper part off the Dust Cup.

C. Take the filter out as shown below to clean it. Run it under water to clean and let it air dry.



A.






B.



C.

D. Clean the plastic part of the Dust Cup by removing it from the dust cup. Wipe clean with a damp cloth, let it dry and put back into the Dust Cup.

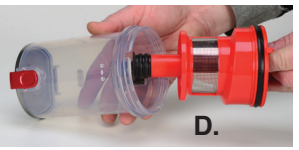

D.

◆ Cleaning the Power Brush

Slide the lock clip on the back of the brush. Remove the bristle from the brush and remove debris and hair from it. Then put the bristle back in and lock the clip.





TROUBLESHOOTING TIPS

- If there is no power/the machine doesn't turn on, it will need to be charged.
- If the bristles are not rotating, they will need to be cleaned.
- If you are charging the battery and the charging light isn't on, the cord may not be inserted properly into the charging port. Try pushing it in farther.
- If the battery won't hold a charge, you may need a replacement battery. Go to www.edenpuresupport.com to purchase one.

PRODUCT SPECIFICATIONS

Model Number	**A5970**
Volts	**25.9V**
Power	**380W**
Input	**100-240V – 50/60Hz 0.5A**
Output	**2500mAh**

This vacuum comes with a 1 year limited component warranty. If your unit does not appear to be working properly, please contact our service center by calling 1-800-225-6595. Prior to your call, we encourage you to visit our service related website www.edenpuresupport.com for troubleshooting tips and service instructions if needed.

EdenPURE®
7800 Whipple Avenue NW
N. Canton, OH 44720
custserv@edenpure.com

©2022 EdenPURE® I-5761 BR12181R-1